G GATEMASTER

SUPERLOCK CODE RAPIDRESET QUICK-EXIT KEYPAD ENTRY





PRODUCT DETAILS

 
The RapidReset code lock mean you can change the code swiftly and easily without removing the lock from the gate. This Quick Exit version is equipped with a combination keypad on one side and quick exit push pad on the other. It has be be installed on gates that can be pushed open from the inside of the property for the exit push pad to work effectively.

Product code:	Description:
BQDGRR1030R BQDGRR4060L	To fit 10-30mm ($\frac{1}{2}$ " - 1 $\frac{1}{4}$ ") gate frames, left hand To fit 10-30mm ($\frac{1}{2}$ " - 1 $\frac{1}{4}$ ") gate frames, right hand To fit 40-60mm (1 $\frac{1}{2}$ " - 2 $\frac{1}{4}$ ") gate frames, left hand To fit 40-60mm (1 $\frac{1}{2}$ " - 2 $\frac{1}{4}$ ") gate frames, right hand

WHAT IS INCLUDED IN THE BOX:









Bolts



Lock (Back)

Keypad (Front)

Lever handle

Face plate

Hex Key

Latch bolt

SUPERLOCK CODE RAPIDRESET **QUICK-EXIT KEYPAD ENTRY**

INSTALLATION

- 1. Drill 2 x 9mm (3/8") holes at 140mm (5 ½") centres for fixing bolts provided.
- 2. Drill a 18mm (¾") clearance hole for the latchbolt at 60mm (2 3/8") centres up from the bottom fixing hole.
- 3. Fix the handles to the square spindles so that the handles are facing away from the latchbolt and secure using the hex key supplied.
- 4. Hold the lock against the back of the box section and screw on the latchbolt through the larger hole.
- 5. Lock the latchbolt with the hex key supplied by inserting the hex key into the end of the latchbolt.
- 6. Fix lock in place using the stainless steel bolt support plate and the countersunk screws provided. Ensure the latchbolt moves freely.
- 7. Fix strike plate by either welding or screw fixing onto the gate post
- 8. MAINTENANCE Every 6 months, lubricate the latchbolt with light oil. Annually, dismantle the lock and spray mechanism with light oil.
- 9. If you have any problems with the latch bolt sticking, drill out the latch bolt hole as this should alleviate the issue.



[160 mm]

6 5/16 in

[142 mm]

5 9/16 in

Superlock Secure Keep

(BSK)


Superlock Interlocking Keep (BSKS)

Superlock Gapless Keep (BSKG)







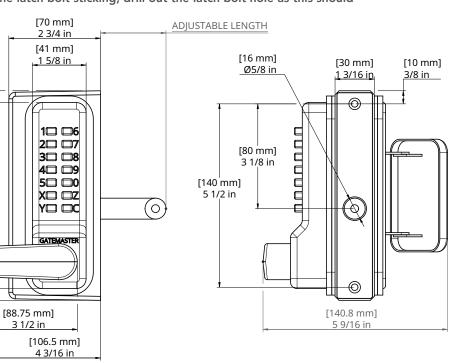





GATEMASTER



+44 (0)1243 558580